

Tamagotchi Uni



CONTENTS

P1	1 CAUTION!
P1	2 PRECAUTIONS FOR USE
P1	3 DISCLAIMER
P2	4 OTHER NOTES
P2	5 INQUIRIES ABOUT TAMAGOTCHI UNI SERIES PRODUCTS
P2	6 DEVICE GUIDE
P2	7 DEVICE AND BAND
P3	8 CHARGING THE DEVICE
P3	9 CHECKING THE BATTERY
P3	10 TURNING ON THE DEVICE
P3	11 SETTINGS
P4	12 AGREEMENT TO PRIVACY POLICY / TERMS OF USE
P4	13 WI-FI CONNECTION SETTINGS
P5	14 VIEWING SCREENS
P5	15 TAMA SEARCH

P6	16 RAISING TAMAGOTCHI CHARACTER
P6	17 HEALING YOUR TAMAGOTCHI CHARACTER
P7	18 STATUS/SETTINGS
P8	19 CARE ICONS
P8	20 SETTINGS
P8	21 FEED
P9	22 TOILET/BATH
P9	23 PHONE
P9	24 TAMAUVERSE
P10	25 ITEMS
P11	26 GO OUT
P13	27 CONNECT
P14	28 NETWORK

© & © 2024 BANDAI



1 CAUTION!

- For Ages 6 and up.
- Clock accuracy: 10 seconds per day.
- Please note that product may differ slightly from images in the instruction manual.
- Images are for illustrative purposes only.
- Choking Hazard: Contains small parts. Do not give to children under 3 years of age.
- Read instruction manual before use.
- Please do not use this product if you have a pacemaker as it contains electronic components, speakers, magnets etc.
- Misuse of the internal battery may cause overheating, rupture, combustion, or leakage. Please note the following:
 - Short-circuits can cause dangerously high electrical currents. Avoid this under any circumstances.
 - If the product gets wet, stop using it immediately. It may short-circuit.
 - Do not place in water or fire, disassemble, or solder.
 - Do not use, charge, or store this product close to fire or in locations with high temperature and humidity.
 - When disposing of the product follow the disposal regulations of your local government.
- Charge the product in full view, away from flammable objects.
- Before charging, check that there are no abnormalities with the charging cable. Do not charge if the cable is damaged. Failure to do so may result in injury or damage.
- If you detect abnormalities during charging or use of this product such as overheating, foul odor, expanding, or smoke, disconnect this product from the charging cable and stop using it immediately.
- Check the charging status with the battery display on the clock screen. If the battery is not charging while this product is plugged in, or has not finished charging after 2 hours, disconnect the product from the charging cable and stop using it immediately.
- Do not wrap the cable around fingers or other body parts. This could dangerously inhibit blood flow.



Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Use under adult supervision. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Manufactured in China. Distributed by: Bandai UK Ltd, 37-39 Kew Foot Road, Richmond, TW2 2SS, UK. For further information email: support@bandai.co.uk or online at www.bandai.co.uk This toy contains battery that is non-replaceable. Recharging only with person with age of 8 years or older and under adult supervision, never charge the device unattended. Check the product and power cable before charging. Do not charge if the product or power cable is broken or worn. Connect the USB charging cable to a 5V USB port. Recommend using a PC or laptop. Inappropriate use may lead to smoke, fire, and other hazards. Some USB charging ports may not work for this device. Misuse of charging device can cause electrical shock. Press reset button if device can't play properly. Charge the product in a visible location and away from combustibles. Remove the power cable and stop use of the product if the product is hot, has an unusual odor, warps, smoke can be seen, or any other anomalies are detected while charging or using the product. Use the power cable specific to the product. Do not use any other charging cable that was not packaged with the product. Remove the power cable and stop use of the product if the product does not show that it is being charged, or the product does not charge after 2 hours of charging. Do not tug on the cord when removing the power cable as it can break or lead to complications. Do not use product under cold temperatures. The cold may affect the battery and prevent proper function of the product. Do not drop, water, dirty or dismantle the device and prevent getting wet on the device while washing hands when you wear the device. Prevent damage to or entry of any foreign object into the USB port. Specific Absorption Rate (SAR) information for this device: The SAR limit is 4W/kg average over one gram of tissue. SWALLOWINI has been tested against this SAR limitation. The highest SAR value reported under the required

standards during product certification is found 0.286 W/kg only. / Frequency Bands: 2.4GHz band / 2412MHz-2472MHz Maximum Radio-Frequency Power<20dBm (For EU market) Herby, Bandai Co., Ltd. Declares that the radio equipment type SWALLOWINI is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following <https://imgc.tybz.jp/UN/EUDECLARATION/>

2 PRECAUTIONS FOR USE

- Plastic packaging materials should be discarded immediately after opening.
- Do not place this product on plastic sofas, seats, tiles, etc. Prolonged contact may cause discoloration.
- Do not roughly pull or bend the moving or mounted parts in unintended directions.
- This product is composed of precise electronic parts. Do not drop, get wet, soil, or disassemble. Avoid use or storage in high or low temperatures.
- Press reset button in case of malfunction.
- Only use the charging cable intended for use with this product. Do not use a generic charging cable under any circumstances.
- When the charging cable is connected, do not put undue stress on the connector. This may cause damage.
- Do not use in temperatures of 5°C or below. The internal battery may not function properly, preventing normal operation. This may also prevent the device from charging properly.
- No guarantees are provided regarding lost data.

3 DISCLAIMER

⚠ WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV / technician for help. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3 (B)/NMB-3(B). This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

4 OTHER NOTES

* When setting up this product for the first time, you must have internet access in order to agree to the privacy policy and terms of service.

<RADIO INTERFERENCE>

- This product uses a lithium ion polymer battery. Follow the disposal regulations of your local government when discarding your Tamagotchi Uni.
- Comply with airline company regulations when using the product in an aircraft.
- Comply with administrator instructions when using the product in hospitals or places with electronic equipment that use weak signals or high-precision controls.
- When equipped with medical electronic devices, or when using medical electronic equipment other than implantable devices during home recuperation, please confirm the effect of radio waves with the medical device manufacturer or distributor before using this product.

<COMMUNICATION FUNCTION>

Usage in close proximity to other electronic devices may result in radio wave interference. Use in another location to avoid this.

- Radio waves may prevent wireless transmissions, especially when using a microwave oven.
- If several Wi-Fi access points exist nearby and use the same channel, they may not appear in search.
- We do not take any responsibility for data or information leakage that occurs during Wi-Fi transmission. Compatibility with all Wi-Fi access points is not guaranteed. Services that use Wi-Fi may be suspended, put under maintenance, or may change in content without notice.

<WI-FI CONNECTION>

This product is compatible with 2.4 GHz IEEE 802.11 b/g/n (HT20) and WPA/WPA2/WPA3 security.

<END OF SERVICE>

Tamagotchi Uni services that use Wi-Fi may be suspended without notice. Please see the official website for details.

<DATA UPDATES>

- The product is connected wirelessly when these symbols are shown in the upper-left of the screen.



5 INQUIRIES ABOUT TAMAGOTCHI UNI SERIES PRODUCTS

Bandai Customer Support Center Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618
Open Monday - Friday 10:00am to 5:00pm (excluding national holidays, and summer and winter holidays) Or send inquiry email to Customer Service on www.bandai.com * For North America customer only.

MADE IN CHINA

 
Manufactured for Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618

Actual size, color, style and decoration may vary. Retain packaging and instruction as it contains important information. Bandai logo: © & © 2024 BANDAI. All Rights Reserved. Package: © & © 2024 BANDAI.

6 DEVICE GUIDE

<INCLUDED COMPONENTS>

- Tamagotchi Uni ...1
- Tamagotchi Uni Band ...1
- Charging Cable ...1
- Instruction Manual ...1

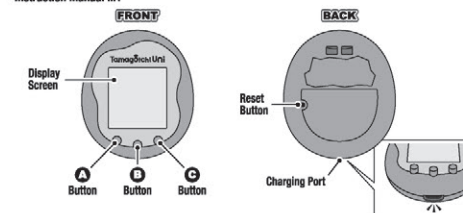

BASIC OPERATION

- A** Select **B** Confirm **C** Cancel/Back

7 DEVICE AND BAND

 
The Tamagotchi Uni device has 3 cavities (2 on top and 1 on the bottom).



The band of the Tamagotchi Uni device has 3 protrusions (2 on the top and 1 on the bottom).



Assemble the Tamagotchi Uni device by placing the band on and bringing the 2 top and 1 bottom parts together.

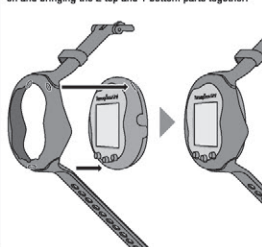


8 CHARGING THE DEVICE

- When the low-battery screen appears (see below), please charge your Tamagotchi device.
- You must remove your Tamagotchi device from your wrist before charging.

1: First, remove the band from the device.

 2: Insert the USB type-C end of the provided charging cable into the charging port on the bottom of the device.

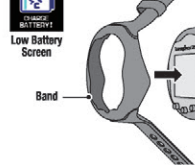


3: Insert the other end of the cable into your computer's USB port.

- * Charging requires a computer or a valid USB Power adapter.



4: When charging is complete, unplug the charging cable immediately.

 - * If "Charging" screen does not appear on-screen during charging, or "Charging complete" screen does not appear after 2 hours of charging, unplug the charging cable and stop using the device immediately.
- * Charging may not occur properly in temperatures at 5°C or lower.



9 CHECKING THE BATTERY



The battery status is shown on-screen when you insert the cable.



Battery Display
Check the charging status with the battery display on the clock screen (→ SECTION 14 VIEWING SCREENS -HOLD A BUTTON ON THE STANDBY SCREEN-).

10 TURNING ON THE DEVICE

- Hold the B button for 5 seconds.

NOTE: If the device does not turn on, press the Reset Button once, then hold the B button again for 5 seconds. If the device still does not turn on, it may need charging. Charge the device for 2 hours before use.

- * Only use the included charging cable for charging.
- * The charging screen will not display during charging if initial setup has not been completed.

11 SETTINGS



* Refer to "Entering Numbers" for clock and birthday input, and "Entering Letters" for nickname input.

ENTERING NUMBERS

A	Scroll to next number
G + A	Scroll to previous number
B	Confirm/Proceed
C Twice	Return to previous selection

ENTERING LETTERS

Cursor

1: Move the cursor and select the box to enter a letter in. (The cursor will blink until a selection is made.)

2: Select the row with the letter you want.
* The menu is displayed in the following order: letters > numbers > symbols > smileys > end.

3: Move the cursor and select the letters/numbers/symbols/smileys.

4: Select YES on the confirmation screen to finish typing.
● **How to Reach the Confirmation Screen (3 ways)**
• Scroll to the end row and press the B button.
• Move cursor to the last letter box and press the A button.
• Enter a letter in the last letter box and press the B button.

Confirmation Screen

A Move cursor forward
B Confirm box
C Move cursor backward

A Select row
B Confirm row

A Scroll to next letter
B Confirm letter

12 AGREEMENT TO PRIVACY POLICY / TERMS OF USE

- If you don't understand, show a family member.
- You must agree to the privacy policy and terms of use before playing with the Tamagotchi Uni device. Please scan the codes below with your mobile device to access the privacy policy and terms of use. If you agree, select AGREE to confirm.
- * Internet fees may apply.

<PRIVACY POLICY>

<https://tmgc.ty.jp/UNI/PRIVACYPOLICY/>



<TERMS OF USE>

<https://tmgc.ty.jp/UNI/AGREEMENTS/>



* Shows intellectual property information. <https://tmgc.ty.jp/UNI/LEGALINFO/>

NOTES ON READING CODES VIA MOBILE DEVICE:

- * Update your device's OS to the latest version. iPhone users should use the normal Camera function.
 - * For browsers, iPhone users should use Safari, and Android users should use Google Chrome.
- ## 13 WI-FI CONNECTION SETTINGS
- * You can change settings at a later time.
 - You can play with the Tamagotchi Uni while connected to the internet via Wi-Fi.
 - * Requires an internet connection and a wireless router or access point.
 - * This product is compatible with 2.4 GHz IEEE 802.11 b/g/n (HT20) and WPA/WPA2/WPA3 security.
 - * Internet fees may apply.

When setting up Wi-Fi, select BY PHONE to set up with your mobile device, or select BY DEVICE to set up with your Tamagotchi Uni device. If you wish to set Wi-Fi at a later time, select SET LATER.

NOTE: The device cannot connect to the internet when using authentication settings like a captive portal (a service that requires login via a browser when connecting to wireless LAN).

- On your home's wireless router, check the SSID (the router name) and the password (an encryption key or security key).
- If you do not know the SSID/password, see the instruction manual or homepage for your wireless router (or access point), or contact the manufacturer.
- For your Tamagotchi device's MAC address, go to NETWORK SETTING, WI-FI SETTING and select BY PHONE, and check the bottom of the Settings page displayed on your mobile device.
- If the device does not connect successfully, service may be suspended or under maintenance. Please see the official website for details.

SETTING BY PHONE

NOTES ON READING CODES VIA MOBILE DEVICE:

- * Update your device's OS to the latest version. iPhone users should use the normal Camera function.
- * If images or videos do not display on your mobile device, try temporarily disabling cellular data.
- * For browsers, iPhone users should use Safari, and Android users should use Google Chrome.

- 1: When your mobile device camera is ready, press the B button to proceed to the next step.
- 2: Scan the code that appears with your mobile device camera to connect the Tamagotchi device to your mobile device. When scanning is complete, proceed to the next step.
- 3: When the device is connected to your mobile device, "CONNECTED" will appear. Press the B button to proceed to the next step.

- 4: The next screen will be for setting up Wi-Fi connection on your mobile device. Prepare the information needed to connect to Wi-Fi, such as your wireless router/access point's SSID and password. When you're ready, press the B button to proceed to the next step.
- 5: Scan the code with your mobile device camera to access the settings screen. After scanning, input your wireless router/access point's SSID and password on your mobile device. The next screen will display once input is complete.
- 6: When settings have been configured, this screen will be displayed. Press the B button to proceed to the next step. A connection test will be performed. Upon a successful test, you will move to the Egg Selection screen.

SETTING BY DEVICE

First, select AUTO or MANUAL.
* AUTO setting will work in most cases.
* For details on MANUAL, check "Change Settings" (→ SECTION 28 NETWORK <CHANGE SETTINGS>).

 
AUTO

- Select the SSID (wireless router name) for the wireless router/access point in use.
- * Non-alphanumeric characters will not be displayed. If the SSID contains non-alphanumeric characters, they will be displayed as "??".

Enter the password to your wireless router.
* Refer to SECTION 11 SETTINGS <ENTERING LETTERS> for password input. After input, a connection test will be performed. Upon a successful test, you will move to the Egg Selection screen.

14 VIEWING SCREENS

- The Care Menu and the Clock screen are accessible from various screens.

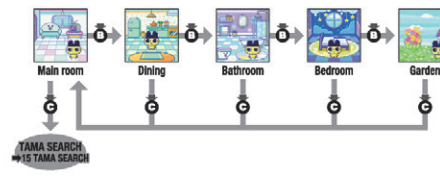

PRESS THE A BUTTON ON THE STANDBY SCREEN

- Use different Care options to look after your Tamagotchi character!

- A Select Care Option.
- B Confirm Care Option.
- C Show Main Room screen.

STATUS/SETTINGS	FEED	TOILET/BATH
PHONE	TAMAVVERSE	ITEMS
GO OUT	CONNECT	NETWORK

* Only STATUS/SETTINGS and NETWORK are available while your Tamagotchi character is sleeping.
* Only some Care options are accessible at the Baby stage.

HOLD A BUTTON ON THE STANDBY SCREEN



- A Show home screen.
- B Show Clock Menu screen.
- C Show home screen.



DESIGN: Change the design of your clock.
DATE/TIME: Change the date and time.
DISPLAY: Change the date display order.

15 TAMA SEARCH

- Head on out to town to find Tama Friends!
* This cannot be used during the Baby stage.

Select YES to go TAMA SEARCH.
Select NO to return to Standby Screen.
Check the Stickers you have collected at STICKERS.

<TAMA SEARCH>
Your Tamagotchi character will start TAMA SEARCH.

- A Scroll next
- B Confirm
- C Back

SSID Order of SSID

<WHEN FOUND>
SSID (Name of the Wi-Fi access point)
Select the SSID you want to see.
* There may be up to 4 locations to choose from.

The Tamagotchi character you might meet will appear when you select an SSID.
If you want to meet them, press the B button.

Receive STICKERS from Tamagotchi characters you meet!
* Become friends by meeting the same Tamagotchi characters.
* You receive a STICKER on the 1st, 3rd, and 5th time you meet.
* You can only receive one STICKER a day from the same Tamagotchi character.
If you didn't get one, try meeting another day!

Got A STICKER!

<WHEN NOT FOUND>
When nothing is found, change locations and start TAMA SEARCH again!

<STICKER>
Select the one you want to see.
NORMAL: See STICKERS received from Tamagotchi characters.
SPECIAL: See STICKERS received from meeting Tamagotchi characters at special locations.

The STICKERS you received will be displayed.
Select and confirm a STICKER to see the details!

STICKER Friendship Level

A Scroll next
B Confirm
C Back

- Caution when playing.
- Depending on the location, certain characters may not appear, or the same characters may appear.
 - Some characters may appear at different locations.
 - Depending on the area, you may not be able to meet all characters.
 - The data cannot be carried over to another device.
 - A full reset will erase the data.

16 RAISING TAMAGOTCHI CHARACTER

- As it grows, your Tamagotchi character's appearance and characteristics will change according to how you take care of it, so give it lots of love!

Egg → Baby → Child → Teenager → Adult

My Tamagotchi Character Talks?
Your Tamagotchi might speak to you sometimes!
* Be sure to set SOUND to ON. (→ SECTION 20 SETTINGS <SOUND>)

You can meet talking Tamagotchi characters when you go out!

See your Tamagotchi Character's Personality!
How it takes a bath... Its accessories... Even where it takes a pool!

17 HEALING YOUR TAMAGOTCHI CHARACTER

If your Tamagotchi character shows either of the symptoms on the left, press any button (A, B or C) to give it treatment! If once doesn't do the trick, try again!



MY TAMAGOTCHI CHARACTER LOOKS LIKE IT'S GOING TO DIE!

If you let your character stay sick or don't take good care of it, the Grim Gatchi will appear. If you see the Grim Gatchi, hurry and press any button (A, B or C) to call an Ambulance!



- Please follow public rules and manners!
Don't look at the screen while walking!
- Follow traffic and public rules.
 - If you do not have permission, do not enter certain places and buildings that require them.
 - Do not enter prohibited or dangerous places.
 - At public facilities such as parks, where there are many people, please be courteous of those around you.
 - Do not raise your voice or make loud noises during game play.
 - Do not look at the screen or operate the device while walking or driving.
 - Make sure the place is safe, and be careful of your surroundings when playing.

IF YOUR TAMAGOTCHI CHARACTER DIES...

If your Tamagotchi character dies, the Death screen will appear. Press the A button to see the Clock screen. Press the B button to view the profile of the Tamagotchi character that has passed away. Press the A button while holding the C button, and a new egg will appear.

18 STATUS/SETTINGS

- Check the status of your Tamagotchi character, and change any device settings!

STATUS

Find out the current status of your Tamagotchi character. Check often to see how to care of it!

- HUNGER: Shows hunger level
- HAPPY: Varies by mood and relationship with you.
- GOTCHI POINTS: Tamagotchi Planet Currency (Maximum: 99,999 points).

PROFILE

Shows your Tamagotchi character's profile. Edit details, or send an image to your mobile device!

- Tamagotchi Name
- Personality
- Days Spent Together
- Current Main Room and Tamagotchi Character
- Latest Favorite Item of Tamagotchi character
- Area of Residence
- Your Nickname
- Care Icon
- TAMA NAME
- GREETING

- A Next page
- B Open Edit Profile menu

EDIT PROFILE MENU

First, choose what you want to do!
EDIT: Edit your Profile details.
SEND PHONE: Send an image of your Profile details to your mobile device.

EDIT CATEGORY MENU

Select the category you want to change.
NICKNAME: Change your nickname.
BIRTHDAY: Change your birthday.
CHANGE ICON: Change Care Icons.
TAMAVVERSE: You can edit your TAMA NAME and GREETING.

TAMAVVERSE
TAMA NAME: Change your TAMA NAME.
GREETING: Change your GREETING.

TAMA NAME: Combine 2 words to make a TAMA NAME! The TAMA NAME you make will be displayed when you send HEARTS.

GREETING: For GREETING, you can choose from 4 default phrases, or combine emoji to make one yourself.

SEND PHONE

You can send your Profile to your mobile device!

Select SEND PHONE on your Tamagotchi device and follow the on-screen instructions to scan the code and display your Profile on your mobile device.

Your Profile will be displayed in your mobile device's web browser, allowing you to save it as an image.
* The method for saving data may differ according to the model and version of your mobile device.

DISPLAYING IMAGES ON YOUR MOBILE DEVICE

- If your browser does not display the screenshot after scanning the second code, or displays a "504" error message, please try the following:
- Your mobile device may not connect to your Tamagotchi Uni device if its data transmission method is giving priority to cellular data. Temporarily disabling cellular data in your mobile device's settings may resolve the issue.
- Your mobile device may not connect to your Tamagotchi Uni device if its data transmission method is giving priority to Wi-Fi connections. Taking your device out of Wi-Fi range or temporarily disabling your smartphone's Wi-Fi settings may resolve the issue.
- If you have security software enabled, it may prevent connections from working properly.
- This product is not guaranteed to be compatible with all mobile device models.

19 CARE ICONS

● You can receive CARE ICONS by fulfilling various conditions. Try to collect them all!



View CARE ICONS you've obtained here! Select an icon you wish to view in the icon list to bring up the icon's details. The conditions for obtaining the icon will be displayed, and you can turn the page to see how long to reach the next level.

THE ICON'S COLOR CHANGES!



20 SETTINGS

● Change settings such as the screen brightness and sound!

BRIGHTNESS

Change the brightness of the screen.



- Ⓐ Darken
- Ⓑ Brighten
- Ⓒ Save & Exit

SOUND

The volume can be adjusted.



- Ⓐ Decrease
- Ⓑ Increase
- Ⓒ Save & Exit

*No sounds will play when on this screen.
*Please note that calls for treatment and feeding will also be turned off.

21 FEED

● If your Tamagotchi character gets hungry and its happiness level starts to drop, it's time to feed it!

FEED



Choose what you want to feed it!

- Feed your Tamagotchi FOOD to refill its HUNGER meter, and SNACKS to increase its HAPPY level!
- Each Tamagotchi character has its own likes and dislikes, so try different kinds of FOOD and SNACKS!
- Items that display a quantity will decrease by one each time you feed your Tamagotchi character.
- Items that do not display a quantity can be given to your Tamagotchi character as many times as you like!

DLC ICON

Items that you download will have a "DLC icon" displayed in the upper right corner! See SECTION 28 NETWORK <DOWNLOAD> for more information on downloads!

DELIVERY

* This cannot be used during the Baby stage.



1: Get food delivered! First, choose between FOOD or SNACKS.



2: Choose what you want delivered.

- You can have up to 3 of the same item. You won't be able to buy any more than that!
- Items marked with FREE can be acquired free of charge (© Gotchi Points)!
- Sales are held on the 5th, 15th, and 25th of every month! Prices are reduced by 50%!



 
3: Choose how many you want to buy. Your purchases will be sent to your house!

Places that display this symbol require Gotchi Points (money on Planet Tamagotchi) for purchase.

22 TOILET/BATH

● Take your Tamagotchi character here if it looks like it needs the toilet or a bath!

TOILET



If your Tamagotchi character is squirming around and looks like it needs the toilet, either select the Toilet/Bath icon or take it to the Bathroom! If your Tamagotchi character poops in the wrong room, you can select Toilet/Bath icon to clean it up!

BATH



Give your Tamagotchi character a bath! Your Tamagotchi character will get really dirty if you don't give it a bath every few days!

23 PHONE

● View your Tamagotchi character's social, leave it with a sitter, and more!

SOCIAL



Your Tamagotchi character will make a post once per day!
* This cannot be used during the Baby stage. A new social post will be added every day at 7 p.m.! Up to 10 posts can be saved.

- Ⓐ Next page
- Ⓑ Send to Phone

SEND TO PHONE



1: You can send your Tamagotchi's post to your mobile device! Select SEND PHONE to display a code that can be scanned to connect the device to your mobile device.



2: After the connection is established, use your mobile device to scan another code in order to display the post. It will show up on your mobile device!

The log image will be displayed in your mobile device's web browser, allowing you to save it as an image.
* The method for saving data may differ according to the model and version of your mobile device.

PAST TAMAS



Check a record of previous Tamagotchi characters you've raised!
You can save data on up to five generations of past Tamagotchi characters.

- Ⓐ Next page

SITTER



Have someone watch your Tamagotchi character for you!
Ask a sitter to watch your Tamagotchi character when you're too busy to do so!
* This cannot be used during the Baby stage. Select YES to leave your Tamagotchi character with the sitter. The sitter will take care of your Tamagotchi character for you.
• You can leave your Tamagotchi character with the sitter from 7:00 a.m. to 5:59 p.m.
• When you want to pick up your Tamagotchi character from the sitter, press the B button and select YES when PICK UP? is displayed.
• You cannot leave your Tamagotchi character with the sitter if its HUNGER meter is at 0, or if it is in need of medical treatment.



Be sure to pick up your Tamagotchi character before 6 p.m. If you do not pick up your Tamagotchi character by 6 p.m., it will get scared and its HAPPY level will drop.

24 TAMAMUSE

● Have your Tamagotchi characters you've raised venture out into the world! Meet Tamagotchi characters from around the globe!
* This cannot be used during the Baby stage.



TAMAMUSE: Goes to the ENTRANCE of TAMAMUSE.

DL AREA: Goes directly to the TAMAMUSE PORTAL.

Ⓒ: Tamagotchi characters at TAMAMUSE can be manually updated once a day.

* If AUTO UPDATE is ON and has already updated, or if you joined a TAMAMUSE event, you will not be able to manually update.



The Tamaverse is divided into various areas. Press the B button to go through the gate!

ENTRANCE



After entering the Tamaverse, you'll arrive at the entrance! Once there, you'll be greeted by various Tamagotchi characters! Some of them might even speak other languages!



<ENTRANCE>

If you push B button at the ENTRANCE, Tamagotchi characters at TAMAMUSE will gather and will be able to send HEARTS to each other!

SEND HEART: You can send HEARTS to other Tamagotchi characters at TAMAMUSE.

MY HEARTS: You can check the HEARTS your Tamagotchi character has received.

RETURN: Return to the ENTRANCE.

*Once you return to the ENTRANCE, the HEARTS you had placed on others will be sent out. Be careful, you cannot undo HEARTS or send out new HEARTS.

*You can only send 1 HEART to the same Tamagotchi character once a day.

(You can send out new HEARTS after the Tamagotchi characters at TAMAMUSE have reset.)

- Ⓐ Change gate
- Ⓑ Enter area
- Ⓒ Leave

<SEND HEART>

Use the A button to move the cursor, and B button to check out the profile of the Tamagotchi character you selected.



TAMA NAME
Tamagotchi character's area of residence.
GREETING

Push B button to place HEART.
Push B button again to remove HEART.

<MY HEARTS>

Total HEARTS you have received in the past.
New HEARTS that you have received.
Details of the Tamagotchi characters you have received HEARTS from.

From HEART LIST, you can check out the profiles of the Tamagotchi characters that sent HEARTS to you. You can give back a HEART as a "thank you" by pushing the B button.
*You cannot send an additional thank you HEART to another thank you HEART. In this case, the HEART is not displayed.

TAMA SQUARE

● This is separated into three!

<TAMA PARTY>

Meet various other Tamagotchi characters! You can even propose to a special someone!



First off, join a party! You'll be introduced to four Tamagotchi characters. Find one you like and go out on a date! If you're a match, you can propose to them and get married! After the wedding, an egg will appear in both of your homes. Then, the next generation is born!
* This cannot be used during the Baby, Child, or Teenager stages.



Getting married at a Tama Party may allow the next generation to receive a present from its parents!

<TAMA TRAVEL>

Join a tour and travel the world!



First, select the tour you wish to join! Gotchi Points are required to join a tour. Select YES to set out on the tour! You'll also get souvenirs from the countries you visit! You might even receive SOCIAL updates as well!

<TAMA FASHION>

Check out the latest in Tamagotchi fashion!



Browse Tamagotchi accessories from around the world on the mannequins! If you find an outfit combo that you like, stand in front of it and press the B button to purchase it! You can register your own outfit on the left mannequin! Tamagotchi characters from around the world might come see your outfit!

- Ⓐ Move left
- Ⓑ Confirm

<TAMA ARENA>

Work together or compete with other Tamagotchi characters from around the world in limited-time game events!

 


At TAMA ARENA, events will be regularly held where Tamagotchi characters from around the world will gather! Update and enjoy the events!

<TAMA PORTAL>

Get your TAMAMUSE TICKET and let's go play at the DL AREA!

* TAMAMUSE TICKET (DL AREA) is sold separately.



ENTER: Goes to the DL AREA.
DL AREA: Change the destination of TAMA PORTAL.
INPUT CODE: Add a new DL AREA by inputting the 16-digit code from a TAMAMUSE TICKET.
AREA INFO: You can check the information about available DL AREAS.



Check out the official website for the latest TAMAMUSE TICKET news.

More ways to play when you update! Connect your Tamagotchi Unit device to Wi-Fi for more fun!

25 ITEMS

● Use the items you own! You can even make accessories!

ITEMS

Use items or place them in your room!



Select an item and then confirm it. Next, choose whether to use the item or place it in your main room.
• If it is an item that you already have in your main room, you can select PUT AWAY to remove the item from the room.
• Each Tamagotchi character has its own likes and dislikes!
• Tamagotchi characters are happy if you continue placing items they like in the room! (It will become their "FAVORITE") If you keep placing the item there, they'll become a "PRO" with it!
• Items with a FAVORITE or PRO distinction will be displayed in their PROFILE (⇒ SECTION 18 STATUS/SETTINGS <PROFILE>!).



Select the CLEANING ROBOT to clean your room!
* The RATTLE and CLEANING ROBOT cannot be placed in your main room.

ACCESSORY

Dress up your Tamagotchi character with accessories!

* This cannot be used during the Baby stage.



1: First, choose where you want to place the accessory. You can attach accessories to the head, face, body, and back! If you wish to remove an accessory, choose the location of the accessory and then confirm it.
* You can attach accessories to your Tamagotchi character's head during the Child stage, to its head and face during the Teenager stage, and to all locations during the Adult stage.

- Ⓐ Scroll next
- Ⓑ Confirm
- Ⓒ + Ⓐ Scroll previous
- Ⓓ Hold Press
- Ⓔ Twice Back



2: Next, choose the accessory you want to attach.

FURNITURE

Place furniture in your main room or garden!

* This cannot be used during the Baby stage.



1: First, select where you want to place the furniture. The location will be displayed on the screen. Afterwards, choose the furniture you wish to place.



2: Press the A button to switch between locations, and then press the B button to place the furniture.

CRAFTS

Create your own accessories!

* This cannot be used during the Baby stage.

* You can acquire recipes and materials by going on walks (⇒ SECTION 26 GO OUT <TAMA WALK>!).



<DIY>

1: First, choose where the accessory will go! Next, select the kind of accessory you want to make.



2: The necessary materials will show up here! Press the A button to change the color of the accessory. If you have all the right materials, press the B button to proceed! The accessory is complete!
*When "CREATE" is grayed out, you can't have enough material.

<MATERIALS>

You can see a list of the materials you have!
* You can acquire DIY and materials by going on TAMA WALKS (⇒ SECTION 26 GO OUT <TAMA WALK>!).

<MY BOX>

The extra ACCESSORIES, ITEMS, and FURNITURE that you were not able to hold can now be stored!



TAKE OUT: Take out items from MY BOX and move them to STORAGE.
PUT AWAY: Put away items that are in your STORAGE that you do not use into MY BOX.

<MY BOX CAPACITY>

ACCESSORIES: 80, ITEMS: 40, FURNITURE: 40
* You can have up to 3 of the same item.

● You cannot store the following items in MY BOX.

• RATTLE, BUILDING BLOCKS, CLEANING ROBOT, POTTED FLOWERS, TV, SOFA

• Items downloaded by using DL CODES

• DL AREA items

• Items and furniture currently placed in the room

● Multiples of the same item can be stored all at once in MY BOX.

* If there are more than 3 of the same item, the excess will be sold for GOTCHI POINTS when stored in MY BOX.

* Please do not press the reset button while on this screen. Data may become corrupt.

26 GO OUT

● Go shopping, play games, and take walks with your Tamagotchi character!
* You cannot go out during the Baby stage.

TAMA MALL



BUY and SELL items, and even remodel your room!

1: First, choose whether to BUY or SELL an item, and then select the type.
* If you wish to remodel your room, select BUY and then choose ROOM.



Amount Held



Price

2: After you select the item you wish to buy or sell, choose the quantity.
• You can have up to 3 of the same item. You won't be able to buy any more than that!
• Items marked with FREE can be acquired free of charge (© Gotchi Points)!

• Sales are held on the 10th, 20th, and 30th of every month! The prices are reduced by 50%!

ARCADE

Play games to earn Gotchi Points!

- First, choose the game you want to play!
- Some mini games change with the season!
- You can cancel a game by pressing the C Button.



<DANCING>

Can you keep up with these hot dance moves? First, watch the movements and order of the dance. Don't forget to strike a final pose! When DANCE is displayed on screen, copy the dance moves shown in the example! If you manage to follow the choreography, you succeed! If you can't follow the choreography, you fail!

- Play with the device attached to your left wrist!
- Turn ON the sound before you play.



<FAST FOOD>

Serve hamburgers as quickly as you can! Place hamburgers in front of customers with their hands raised and confirm! Your score is determined by how many correct orders you deliver within the time limit! You'll fail the task if you give a hamburger to a customer that does not have their hand raised.



<EGG HUNT> * Spring only

Collect as many eggs as possible! Move Usatchi up and down to catch the eggs. Your score is determined by how many eggs you successfully catch within the time limit! You'll fail the task if you don't pick up any eggs.



<BEST PHOTO> * Summer only

Can you time your photo to catch the fireworks at just the right moment? Press the button with the proper timing to stop the cursor! The closer the cursor is to the right edge of the gauge, the better the photo will turn out! Your score is determined by how many good photos you take out of 5!



<MATCHING> * Fall only

Harvest the leaf-covered fruits and vegetables in pairs! First, everything will be revealed for 3 seconds. Be sure to remember where everything is! Next, use the cursor to find two matching items! Your score is determined by how many pairs you find within the time limit! You'll fail the task if you are unable to find any pairs within the time limit, or if you choose Kemutchi.



- Move hamburger
- Confirm

- Move up
- Move down

- Stop cursor

- Move cursor
- Confirm



Number caught



<SNOW CATCH> * Winter only

Collect as many snowflakes as possible in order to build a giant snowman! Move Yুদ্ধamatchi to catch the falling snowflakes while avoiding the droplets! Your score is determined by how many snowflakes you catch! You'll fail the task if you don't catch any snowflakes, or if you are hit by a droplet.

- Move left
- Move right



TAMA WALK

Go on a walk with your Tamagotchi!

- Select a course for the walk with your Tamagotchi Uni device.
- Some courses change with the season!
- You can also pick up color materials on the Farm!



Take a walk with your Tamagotchi character!

- The walk will end after 20 minutes. You can receive daily DIY and pick up materials for CRAFTS!
- Press the C Button and select END WALK to end your walk at any time.
- Play with the device attached to your left wrist!



<SEASONAL DESTINATIONS>

Number gathered



<FARM>

Collect fruits to obtain color materials! Tilt the device to move your Tamagotchi character and gather fruits! The task ends once the time limit is reached. The kinds and quantity of colors you can obtain are determined by the types and number of fruits you harvest.



AUTO UPDATE

UPDATE

When AUTO UPDATE is turned on, the system will automatically connect to the network once a day to update data. Automatic updates will occur when the following two conditions are met:

- The Tamagotchi character is sleeping.
- The device has enough battery life or is connected to the charging cable.

If both conditions are not met, automatic updates will not occur. This screen will appear during automatic updates.

- ON/OFF
- Confirm

The following occurs during automatic updates.

- New update check (in the event of an available update, NEW! will appear on the update menu. Please start the update manually.)
- Notification update (in the event of an available update, NEW! will appear on the update menu.)
- DLC list update.
- Update of Tamagotchi characters and TAMA FASHION items in the Tamaverse.



INFO: Appears when there are unread notices.

PLANE MODE

PLANE MODE

Turning ON PLANE MODE turns OFF Wi-Fi connections (stops the sending of radio waves).

- ON/OFF
- Confirm

* Please turn on Plane Mode when you are on an airplane or in other places where the use of wireless communications is restricted.

PARENTAL CONTROLS

When parental controls are turned on, a password will be required for selected menus. Use this feature when you do not want your children to change the Wi-Fi settings or certain other features.

<SETTINGS>

- 1: Switch parental controls ON/OFF and set a password. Turn parental controls on to continue to the password input screen.

- ON/OFF
- Confirm

<RESTRICTION SETTINGS>

Set what will be restricted by parental controls. Select the item you want to restrict and a description of it will appear. Switch ON/OFF to return to the item list.

- ON/OFF
- Confirm

27 CONNECT

Connect Tamagotchi Uni devices for even more fun!

HELP AND NOTES FOR CONNECTING TAMAGOTCHI UNI DEVICES



Approx. 2 meters

Keep away from microwave ovens/wave interference while in use.

When using the Connect feature, keep the devices within approximately 2 meters (6.5 feet) of each other, and stay clear of items such as microwaves that may interfere with radio frequencies when they are in use.

- The Connect feature cannot be used with Tamagotchi devices other than the Tamagotchi Uni device.
- If connection fails or times out on either device, the devices will return to the initial connect screen.
- Try restarting the connection process from either device.

CONNECT

Both players should select CONNECT from the Connect menu, and then have one player choose VISIT while the other chooses INVITE in order to confirm the process.

<INVITE>

A CONNECTION CODE will be displayed on the screen. Share this code with the friend you wish to connect with! Once your friend inputs the connection code, your friend's nickname will be displayed on your screen. Select YES to invite them to your room. The connection is complete!

- If you get the CONNECTION CODE is FULL message, wait a little while and then try again!

<VISIT>

Get the CONNECTION CODE from your friend and input it into your device. Your friend's nickname will be displayed on your screen. Select YES if you wish to visit their room! The connection is complete!

PLAYING WHILE CONNECTED

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
When connected, the host will decide what to play.

Let's play in the room!



<GIFTS>

- You can gift ITEMS or DIVS to your friends! First, choose whether you want to gift an ITEM or share a DIY.
- Select the type of ITEM you want to gift. Next, select an ITEM or DIY, and then send it to your friend!
 - If you selected DON'T GIVE, you won't send your friend anything.
 - You will have one less of the ITEMS you send. (DIY will not disappear.)



<PROPOSE>

Marry your Tamagotchi character with another!



AFTER PRESSING THE RESET BUTTON

- The device has undergone strong shock or something similar, and it no longer works or the screen does not display correctly.
- When you press the Reset Button, you will see a screen with the options CONTINUE or RESET ALL. If you wish to continue raising your current Tamagotchi character, select CONTINUE. After you return to the home screen, adjust the current date and time by going to DATE/TIME (➡ SECTION 11 SETTINGS)
- If you want to raise a new Tamagotchi character, select RESET ALL. You will then register your information and a new egg will appear. The egg will hatch after a little while.
- If you select RESET ALL, all item data and settings will be erased and restored to default.
- If the time runs out and the screen light goes out while the CONTINUE or RESET ALL selection screen is still displayed, the device will automatically proceed with the CONTINUE option.

• "Wi-Fi" is a registered trademark of the Wi-Fi Alliance.

PRECAUTION: Recharge only under adult supervision and never recharge the product unattended. Please read the enclosed user manual or instruction sheet in detail before recharging the product. USB type-C charging cable is included.



This product is powered with lithium-ion polymer battery. Please follow your local district and area rules when discarding the product.



Intertek
EP5025405

ENERGY
PERFORMANCE
VERIFIED
RENDEMENT
ENERGETIQUE
VERIFIE



EN - In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.