Tamagotchi

GEN1

INSTRUCTIONS
取扱説明書


® & © 2025 BANDAI


B2L (EN/日本語)


●For the latest information, please visit https://tamagotchi-official.com/original-select/


●最新の情報は https://tamagotchi-official.com/jp/series/original/ でご確認ください。


詳しい遊び方はWEB取説をチェック！
【https://toy.bandai.co.jp/manuals/pdf.php?id=2666003】
※右の2次元コード、または上記URLよりアクセスの上、WEBサイト上の取扱説明書をご覧ください。
※通信料はお客様のご負担となります。

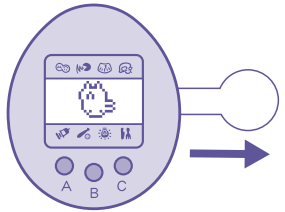

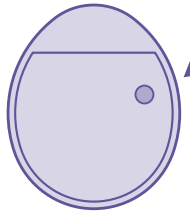

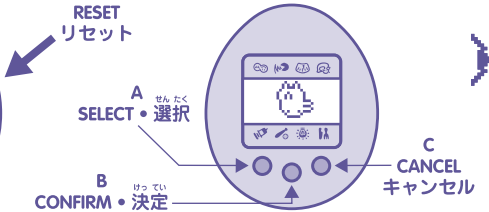

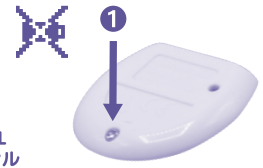


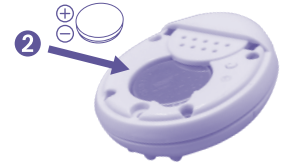





Pinch the joint parts firmly to unlock chain.
ジョイントパーツをしっかりとつまんで、チェーンのロックを解除します。



Hook the tip of the chain into the groove and pull it strongly to lock.
チェーンの先端を溝に引っかけ、強く引っ張るとロックします。

EN ACTIVATION

1) Now that you have your Tamagotchi device, you must do these three things: Wake up Tamagotchi character from its million light year sleep by removing the insulating sheet (pull paper tab from side of body).
2) RESET If necessary by pressing the reset switch on the back of Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage Tamagotchi device.
3) Adjust the time difference between Tamagotchi Planet and Earth (Timer Set). First press the middle button (B) to bring up the timer screen. Use the left button (A) to set the hours, and the middle button (B) to set the minutes. Once you have set the correct time, press the right button (C) to set the timer. Next, return to the main screen by pressing the middle button (B) again.
NOTE: AM/PM is set with the hour. Make sure you set AM for the morning and PM for the afternoon.
4) When you have completed these three steps, a pulsating egg will appear. Tamagotchi character will hatch in about 5 minutes. As soon as Tamagotchi character hatches, it will beep at you for attention. This is where the health meter comes in handy. You can determine the mood, health and behavior of Tamagotchi character with the health meter. Tamagotchi character will need to be fed and played with soon after it hatches. In order to start Tamagotchi character on a good growth path, you must take good care of Tamagotchi character right from the start.

BATTERY

Replace the battery if the Liquid Crystal Display (LCD) is weak or when battery dies.
1) Loosen the screw on the back side. Remove the cover together with the screw. (❶)
2) Take out the old battery. Insert 1 new CR2032 (3V) battery, making sure to match "+" and "−" signs properly. (❷)
3) Replace the cover and tighten the screw.
4) Press the reset switch on the rear of the egg with a pointed object. (Reset Operation)
5) Reset the timer and a new Tamagotchi character will hatch in 5 minutes.
ADULT ASSEMBLY REQUIRED.

HOW TO RESET

1) Press the reset button on the back of the egg with a pointed object (don't push too hard) and a new pulsating egg will appear.
2) Reset the timer function, as outlined in ACTIVATION step 3.

● Please also "RESET" when you can not play completely or see something wrong on the screen.

⚠ WARNING : This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

日本語 たまごっちを育てる前に

1) 本体側面の絶縁シートを抜きます。
ピーッと音が鳴ってたまごが現れます。
2) ＜リセット操作＞本体裏側のリセットスイッチを細い棒で押します。
※リセットスイッチはとがった棒やエンピツ、シャープペンの芯などで強く押さないでください。
3) ＜時計合わせ＞
①B ボタンで時計セット画面にします。
A ボタンで時間、B ボタンで分を合わせたら、C ボタンで決定します。
②B ボタンでたまごっち表示画面に戻します。
4) 約 5 分後、たまごっちが誕生します。
時計合わせをしないとたまごっちは誕生しません。たまごっちが生まれるまで時計・リセット以外の操作はできません。

バッテリー

液晶画面が見えにくい時、画面が点かない時、音が聞こえにくい時は電池を交換してください。
1) 本体裏側のネジを緩めて、電池ブタをはずしてください。(❶)
2) 消耗した電池を取り除き、新しい CR2032 の電池 1 個を＋－を間違えないようにセットします。(❷)
3) 電池ブタを閉じてからネジをしめます。
4) 本体裏側のリセットボタンを先のとがったもので押してください。
(リセット操作)

リセット操作

1) 本体裏面のリセットボタンを押すと、新しいたまごが現れます。(強く押さないでください。)
2) 時計の合わせ方は 3)＜時計合わせ＞を参照してください。


画面の状態がおかしいときや、遊べなくなってしまったときは、リセット操作をおこなってください。

EN **ATTENTION:** When this icon is highlighted, Tamagotchi character needs something. Check the health meter to determine what Tamagotchi character needs. If Tamagotchi character doesn't need anything, it must be disciplined or the attention icon will stay highlighted.

DISCIPLINE: Tamagotchi character needs discipline if it:
1) beeps even though it is full and happy.
2) won't eat when it is hungry.
3) won't play games when it is not very happy.
If you neglect to discipline Tamagotchi character when needed, it might grow up into an unattractive, bad mannered alien.

MEDICINE: If a "skull" image appears, Tamagotchi character is sick and needs medicine. Press A button until the medicine icon is highlighted, then press B. Sometimes 2 or 3 doses are needed before Tamagotchi character is well.

PLAY: Press A button until the bat and ball icon is highlighted, then press B button to begin the game. The object is to guess which way Tamagotchi character will turn. To choose left, press the B button; to choose right, press the A button. If you choose the correct direction, Tamagotchi character will be happy. There are 5 chances in each game to match Tamagotchi character; the more you match, the happier Tamagotchi character will be. To stop the game press the C button. After playing, check the happiness meter to see if it went up or down.

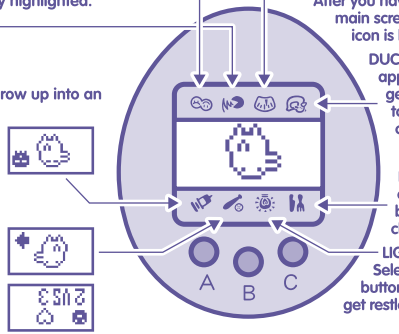

HEALTH METER: Check Tamagotchi character's health by pressing the A button until the health meter icon is highlighted, then press B button to check Tamagotchi character's age/weight, discipline, hunger and happiness. After you have checked all the screens to see if Tamagotchi character needs anything, press C to return to the main screen. You should also check this screen if Tamagotchi character beeps at you and the "attention" icon is highlighted. Discipline Meter ▭ More black hearts means full of happy! ♥♥♥♥

DUCK: Just like real pets, Tamagotchi character goes to the bathroom. If droppings appear on the screen, it must be cleaned up right away or Tamagotchi character will get sick. Press the A button until the duck icon is highlighted, then press the B button to flush the screen. Tamagotchi character will be very happy after the mess is cleaned up.

FEED: Press A button until knife and fork icon is highlighted, then press B. Select either Meal or Snack by pressing the A button to move the arrow, then press the B button to feed Tamagotchi character. Be careful not to overfeed Tamagotchi character. If you do, it will refuse to eat.

LIGHT: Press A button until the light bulb icon is highlighted, then press B button. Select either On or Off by pressing the A button to move the arrow, then press the B button. The light should be turned off when Tamagotchi character is sleeping, or it might get restless! Tamagotchi character will automatically turn the light on when it wakes up.

日本語 ① **食事：**マークをAボタンで選択・Bボタンで決定したら、「Meal（ごはん）」か「Snack（おかし）」をAボタンで選択してBボタンで決定して与えてください。

② **でんき：**マークをAボタンで選択・Bボタンで決定したら、「ON」または「OFF」をAボタンで選択してBボタンで決定してください。たまごっちが眠り始めてサインを出したらでんきを「OFF」にしてください。（たまごっちが寝ている時は、でんき、チェックメーター以外のお世話はできません。

③ **トイレ：**たまごっちがうんちをしたらマークをAボタンで選択・Bボタンで決定して流してください。（うんちをためると病気のもとになってしまいます。）

④ **チェックメーター：**マークをAボタンで選択・Bボタンで決定したら、Aボタン（またはBボタン）を押すと、たまごっちのその時の「年齢・体重」「しつけ」「おなか」「ごきげん」のメーターが順番に出てきます。Cボタンを押すとたまごっち表示画面に戻ります。呼び出しサインが出ているときも、この画面で確認しましょう。

⑤ **ごきげんアップゲーム：**マークをAボタンで選択・Bボタンで決定すると、たまごっちと遊べます。たまごっちが左右どちらを向くのか当てましょう。左を選択するにはBボタン、右を選択するにはAボタンを押してください。押したボタンとたまごっちの止まった向きが同じなら成功です。5回プレイで3回以上成功すると、たまごっちのごきげんがアップします。ゲームを止めたいときはCボタンを押してください。

⑥ **注射：**ドクロマークが出たら病気のサインです。マークをAボタンで選択・Bボタンで決定して、ドクロマークが消えるまで治療してください。たまごっちが回復するまでに、2、3回治療が必要な場合があります。

⑦ **しつけ：**たまごっちがわがままサインを出したら、マークをAボタンで選択・Bボタンで決定してたまごっちをしかってください。こんな時はわがままサインです。●おなか、ごきげんが満足なのに呼びかけてくる時。●おなかが不満足なのに食事をしない時 ●ごきげんが不満足なのにごきげんアップゲームをしない時。

⑧ **よびだしサイン：**たまごっちがあなたに呼びかけると、マークが点灯します。チェックメーターでたまごっちの状態を確認しましょう。点灯している間にお世話をしてあげてください。

⚠ 警　告（けいこく）

保護者の方へ　必ずお読みください。

●小部品や小球があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。

⚠ 注　意（ちゅうい）

《電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください》●万一、コイン電池を飲み込んだとき、コイン電池から漏れた液が目に入ったときは、すぐに医師に相談してください。漏れた液が皮膚や服に付いたときは水で洗ってください。●コイン電池は飲み込むと危険です。お子様の手の届かない所に保管してください。万一、飲み込んだ場合は、すぐに医師に相談してください。●コイン電池の交換は保護者の方が行ってください。●＋－（プラスマイナス）を正しくセットしてください。●ショートさせたり充電、分解、加熱、火の中に入れたりしないでください。●廃棄するときは、自治体の廃棄処理の指示に従ってください。

くちにいれない

《使用上の注意》●データ消失については補償しかねますのでご了承ください。●プラスチック梱包材は開封後はすぐに捨ててください。●本商品を樹脂製のソファーやシート、タイルなどの上に置かないでください。長時間接触していると色が移る場合があります。●可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。●セットされている電池はテスト用です。画面表示が見えにくくなったらコイン電池を新しいものに交換してください。●本商品は精密な電子部品で構成されています。落としたり、水にぬらしたり、汚したり、分解したりしないでください。また、高温・低温になる所での使用、保管はさけてください。●誤動作した場合はリセットスイッチを押し電源を入れ直してください。●時計精度：日差±10秒以内